

MBRP


POWERSPORTS

Muffler Installation Instructions

130T206

2016+ Rev XS 1200

1. Remove both side panels.
2. Remove the windshield.
3. Remove the gauge pod and unplug the 2 electrical connections.
4. Remove 4 Torx head fasteners, 2 near the gauge pod, and one at each side panel opening.
5. Loosen the airbox inlet clamp above the secondary clutch.
6. Remove the hood by sliding the assembly forward then lifting vertically.
7. Remove springs fastening stock muffler to the frame and exhaust pipe. (Set springs safely aside so they can be reused).
8. Remove stock muffler.
9. Remove lower chain case bolt and install lower spring tab and bend as shown.

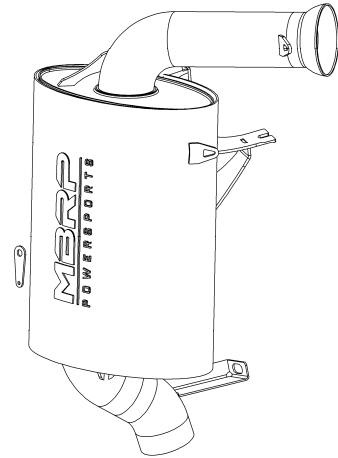

10. Remove the upper and lower rubber mounts from OEM muffler and reinstall them on the MBRP Powersports muffler.
11. Install MBRP Powersports muffler and secure with the stock springs previously removed.

NOTE: To avoid exhaust leaks use high heat silicone to seal all connections between pipes and muffler. Monitor for leaks during the first 200 miles after your installation and re-apply silicone where necessary. We suggest having your local snowmobile mechanic or performance shop install this product.

CAUTION: **DO NOT** touch muffler while snowmobile is running or shortly after it has run, as it may result in personal injury.

MBRP Powersports warranty applies for a one (1) year period from the date of purchase to defects in product material and workmanship and is to the original purchaser on record and for the original vehicle for which it was designed and installed. This warranty is limited, at MBRP Powersports sole determination, to the repair or replacement of defective product only and does not include the cost of removal or re-installation, damage by accident, abuse, misuse or misapplication or any consequential damages however they may arise. Determination of warranty coverage shall be at the discretion of an authorized MBRP Powersports quality engineer.